KL-1911 SERIES PISTOL USER GUIDE

6MM PISTOL


GAS VERSION / CO2 VERSION




⚠WARNING

- ▲When using airsoft guns eye protection is required.(goggles or mask)
- ▲Never place your finger on the trigger until you are ready to fire the gun. Alway put the gun in safe mode when not in use. Tread every gun as if it is loaded.
- ▲Please keep away from children.
- ▲BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.
- ▲Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.
- ▲Do not aim or shoot at humans, animals, buildings, or vehicies.
- ▲Please use a firearm case or bag when transporting your airsoft gun.

KL-1911 PARTS DESCRIPTION

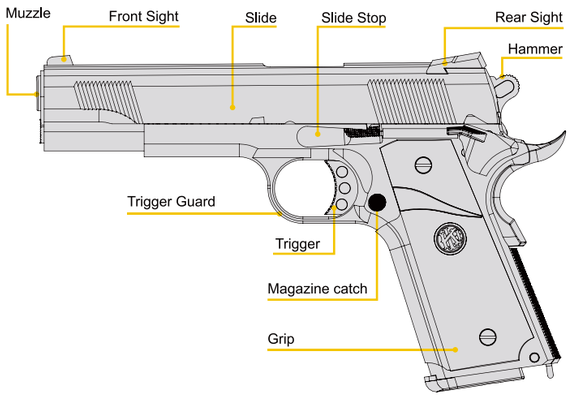

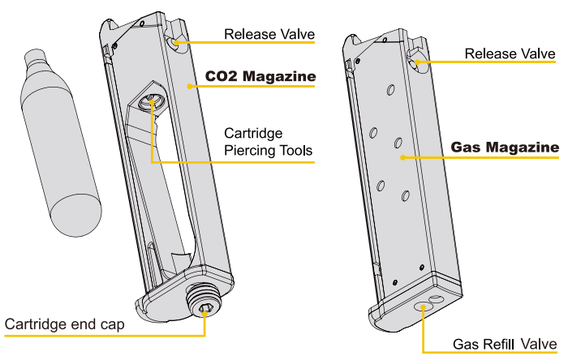


GAS INJECTION

STEP 1



1.Press the Magazine Catch.
2.Remove the Magazine.


STEP 2

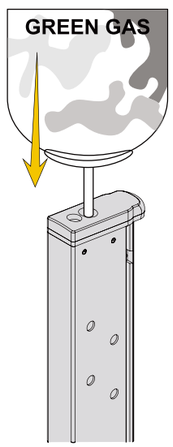

1. Turn the Magazine upside down with gas refill valve facing upwards.
2. Keeping the gas cylinder inverted and vertical to the Magazine,inject gas until completely filled.

Loading BB Bullets

Load BBs into the Magazine as show above.

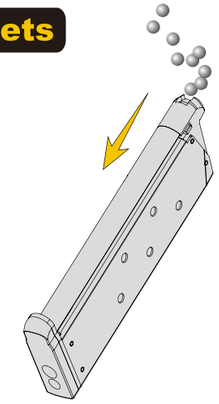


INSTALL CO2 CARTRIDGE


1. Turn the Screw clockwise to puncture the CO2 Cartridge Loading.
2. Loading BBs.




DISAEMBLE SLIDE

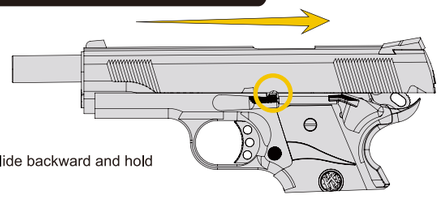

Pull the Slide backward and hold

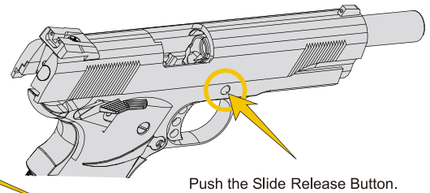


Push the Slide Release Button.

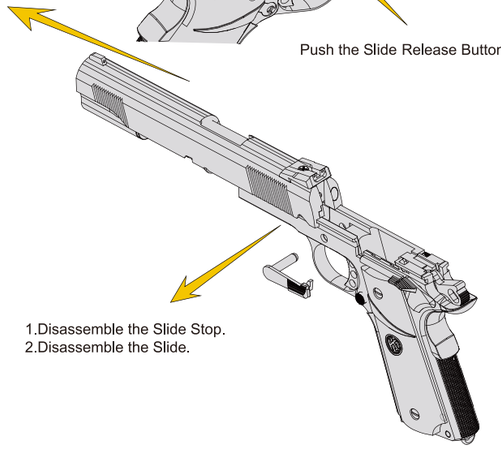


1.Disassemble the Slide Stop.
2.Disassemble the Slide.

HOP-UP ADJUSTMENT (6mm)

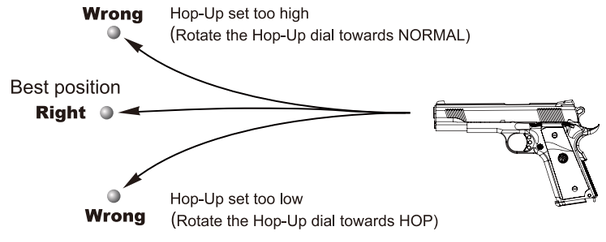


Too much Hop-up
To reduce the Hop-up setting ,rotate the Hop-up dial towards Normal.

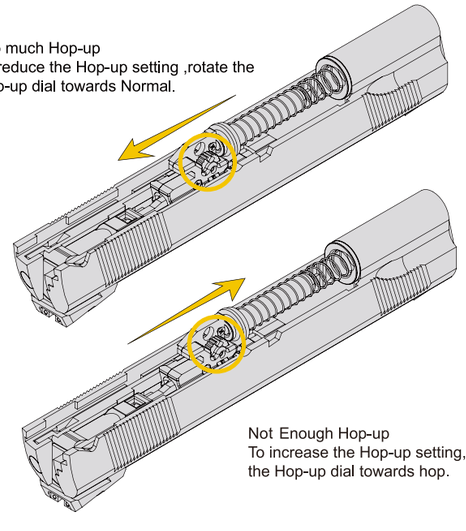


Not Enough Hop-up
To increase the Hop-up setting, rotate the Hop-up dial towards hop.

KL-1911 SCHEMATIC GAS / CO2 Ver. (6mm)

1911 Gas Magazine Schematic

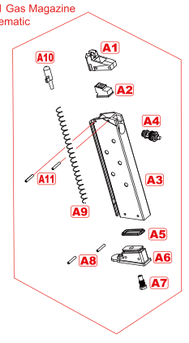

1911 CO2 Magazine Schematic

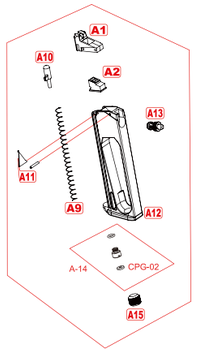

NO	DESCRIPTION
	Magazine set
A1	Magazine Lip
A2	Air Nozzle Rubber
A3	Magazine Frame
A4	Valve (Gas Ver.)
A5	O Ring
A6	Magazine base
A7	Gas Valve
A8	Pin
A9	Magazine Spring
A10	Magazine Bar
A11	Pin
A12	Magazine Frame(CO2 Ver.)
A13	Valve (CO2 Ver.)
A14	Cartridge Stab (CO2 Ver.)
A15	Screw
CPG-02	Seal

NO	DESCRIPTION
1	Barrel Bearing
2	Slide
3	Recoil Spring plug
4-1	Outer Barrel(Longest Ver.)
4-2	Outer Barrel(Shorty Ver.)
5-1	Inner Barrel(Longest Ver.)
5-2	Inner Barrel(Shorty Ver.)
6	Hop Up Chamber
7	Hop Up Bucking
8	Recoil Spring
9	Recoil Spring Guide
10	Air Nozzle (Gas Ver.)
11	Air Nozzle base set
12	Screw & O Ring
13	Piston O Ring
14	Piston
15	Nozzle Spring
16	Air Nozzle base
17	Firing pin Spring
18	Dummy Firing pin

NO	DESCRIPTION
19	Hammer base
20	Hammer Axle
21	Sear base
22	Sear Spring
23	Impact pin
24	Sear
25	Disconnector
26	Shear Spring
27	Shear
28	Hammer set
29	Trigger
30	Magazine catch
31	Lower Receiver(Gas Ver.)
32	Hammer pin
33	Sear pin
34	Plunger base
35	Slide stop

NO	DESCRIPTION
36	Grip safety
37	Hammer Housing pin
38	Plunger set
39	Safety
40	Grip set
41	Grip screw
42	Sear Spring
43	Hammer Spring Screw
44	Hammer Spring
45	Hammer Housing
46	Lanyard mount
47	Firing pin stop
48	Grip set (CO2 Ver.)
49	Grip screw (CO2 Ver.)
50	Lower Receiver(CO2 Ver.)
51	Air Nozzle (CO2 Ver.)
52	Piston Head (CO2 Ver.)

www.krownland.com.tw sales@krownland.com.tw

KL-1911 SERIES PISTOL USER GUIDE

4.5MM PISTOL


CO2 VERSION




⚠WARNING


- ▲When using airguns eye protection is required.(goggles or mask)
- ▲Never place your finger on the trigger until you are ready to fire the gun. Alway put the gun in safe mode when not in use. Tread every gun as if it is loaded.
- ▲Please keep away from children.
- ▲BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲Disassembly or modification of this product may result in damage to your Airgun, loss of warranty, and/or serious injury.
- ▲Please select a safe place to fire your airgun. Always know your state and local laws concerning airgun use.
- ▲Do not aim or shoot at humans, animals, buildings, or vehicies.
- ▲Please use a firearm case or bag when transporting your airgun.

KL-1911 PARTS DESCRIPTION

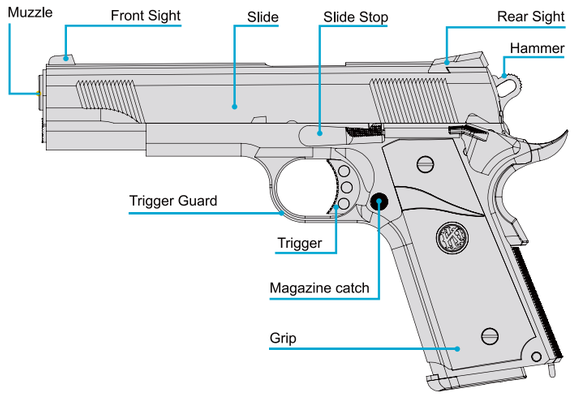

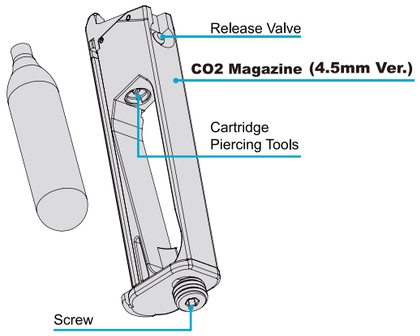


Install CO2 Cartridge Loading BB Bullets

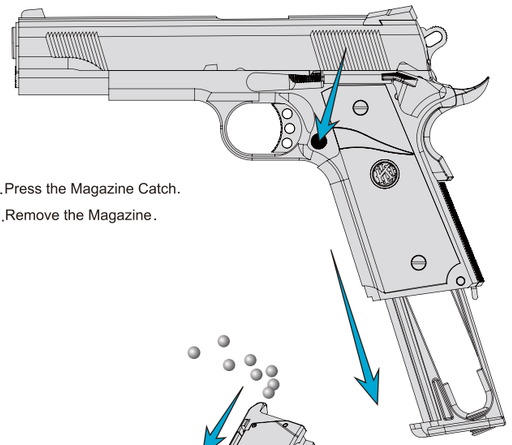


1.Press the Magazine Catch.

2.Remove the Magazine.

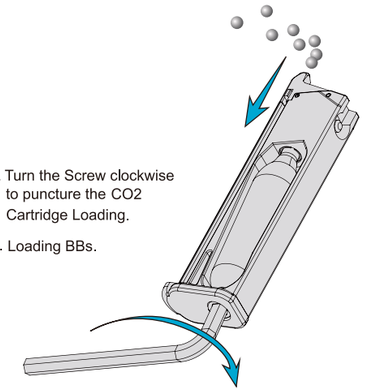


1. Turn the Screw clockwise to puncture the CO2 Cartridge Loading.
2. Loading BBs.


DISAEMBLE SLIDE

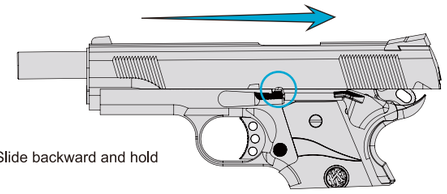

Pull the Slide backward and hold

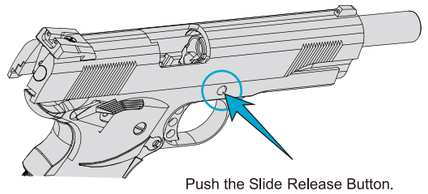


Push the Slide Release Button.

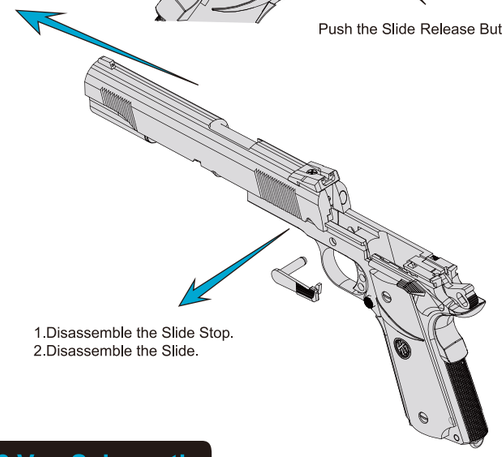

1.Disassemble the Slide Stop.
2.Disassemble the Slide.


SILENT HAWK 1911 Ver. Schematic

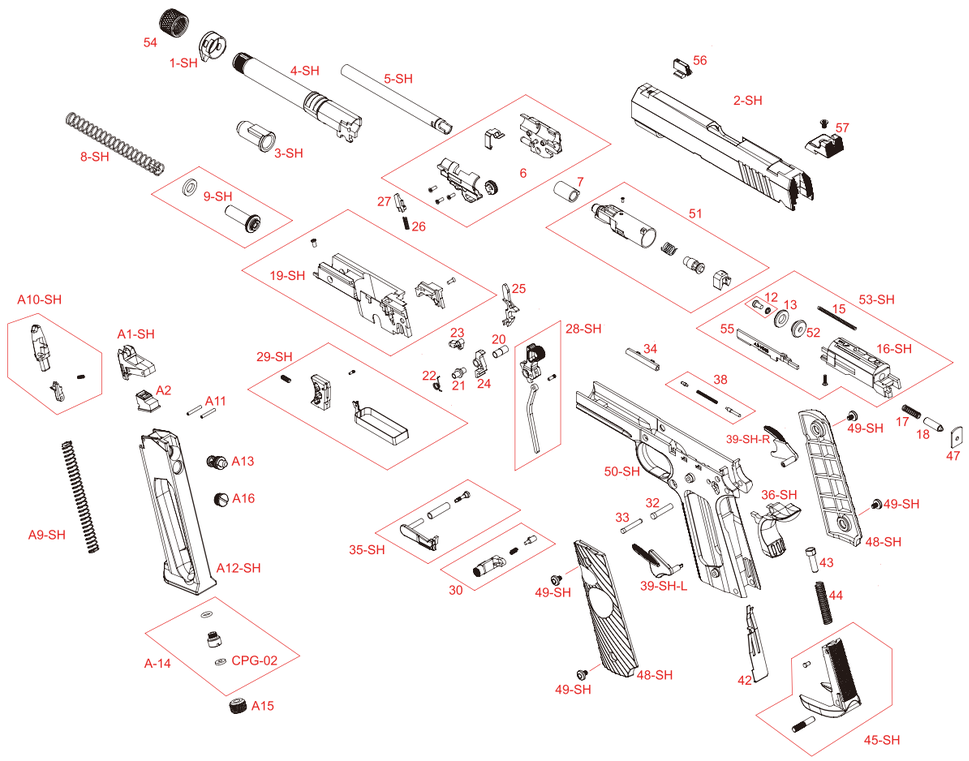


NO	DESCRIPTION
1-SH	Barrel Bushing
2-SH	Slide
3-SH	Recoil Spring plug
4-SH	Outer Barrel
5-SH	Inner Barrel
6	Hop Up Chamber
7	Hop Up Bucking
8-SH	Recoil Spring
9-SH	Recoil Spring Guide
12	Screw & O Ring
13	Piston O Ring
15	Nozzle Spring
16-SH	Air Nozzle base
17	Firing pin Spring
18	Dummy Firing pin
19-SH	Hammer base
20	Hammer Axle
21	Sear base
22	Sear Spring
23	Impact pin
24	Sear
25	Disconnector
26	Shear Spring
27	Shear
28-SH	Hammer set
29-SH	Trigger
30	Magazine catch
32	Hammer pin
33	Sear pin
34	Plunger base
35-SH	Slide stop
36-SH	Grip safety
38	Plunger set
39-SH-L	Left Safety
39-SH-R	Right Safety
42	Sear Spring
43	Mainspring screw
44	Mainspring
45-SH	Mainspring Housing
47	Firing pin stop
48-SH	Grip set (CO2 Ver.)
49-SH	Grip screw (CO2 Ver.)
50-SH	Lower Receiver(CO2 Ver.)
51	Air Nozzle set (CO2 Ver.)
52	Piston (CO2 Ver.)
53-SH	Piston set (CO2 Ver.)
54	Thread Cover
55	Slide bracket
56	Front Sight
57	Rear Sight

NO	DESCRIPTION
	Magazine set
A1-SH	Magazine Lip
A2	Air Nozzle Rubber
A9-SH	Magazine Spring
A10-SH	Magazine Bar
A11	Pin
A12-SH	Magazine Frame
A13	Valve(CO2 Ver.)
A14	Cartridge Stab set (CO2 Ver.)
A15	Screw
A16	Screw
CPG-02	Seal

KL-1911 4.5mm CO2 Ver. Schematic

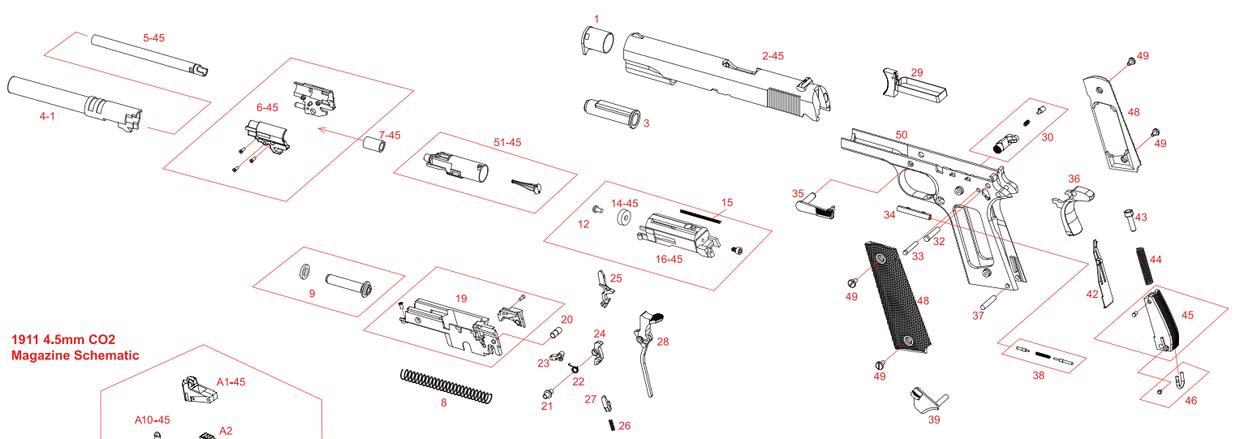

1911 4.5mm CO2 Magazine Schematic

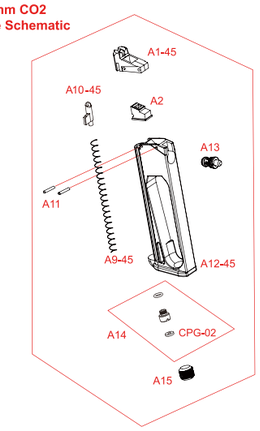

NO	DESCRIPTION
1	Barrel Bearing
2-45	Slide (4.5mm Ver.)
3	Recoil Spring plug
4-1	Outer Barrel(Longest Ver.)
5-45	Inner Barrel (4.5mm Ver.)
6-45	Hop Up Chamber(4.5mm)
7-45	Hop Up Bucking
8	Recoil Spring
9	Recoil Spring Guide
12	Screw
14	Piston head (4.5mm Ver.)
15	Nozzle Spring
16-45	Air Nozzle Base(4.5mm Ver.)
19	Hammer Base
20	Hammer Axle
21	Sear Base
22	Sear Spring
23	Impact Pin
24	Sear
25	Disconnector

NO	DESCRIPTION
26	Shear Spring
27	Shear
28	Hammer set
29	Trigger
30	Magazine catch
31	Lower Receiver(Gas Ver.)
32	Hammer pin
33	Sear pin
34	Plunger base
35	Slide stop
36	Grip safety
37	Hammer Spring Housing pin
38	Plunger set
39	Safety
42	Sear Spring
43	Hammer Spring screw
44	Hammer Spring
45	Hammer Spring Housing
46	Lanyard mount
48	Grip set (CO2 Ver.)

NO	DESCRIPTION
49	Grip screw (CO2 Ver.)
50	Lower Receiver(CO2 Ver.)
51	Air Nozzle (CO2 Ver.)
52	Piston head (4.5mm Ver.)

NO	DESCRIPTION
	4.5mm Ver. Magazine set
A1-45	Magazine Lip
A2-45	Air Nozzle Rubber
A9-45	Magazine Spring
A10-45	Magazine Bar
A11	Pin
A12	Magazine Frame (4.5mm)
A13	Valve(CO2 Ver.)
A14	Cartridge Stad(Co2 Ver.)
A15	Screw
CPG-02	Seal

www.krownland.com.tw
sales@krownland.com.tw