

KL-HERC
CAL. 4.5MM (.177)
CAL. 6.0MM
CO2 REVOLVER USER GUIDE

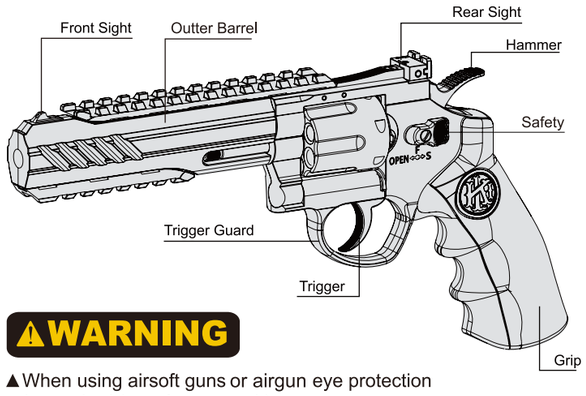


⚠WARNING

- ▲When using airsoft guns or airgun eye protection is required.(goggles or mask)
- ▲Never place your finger on the trigger until you are ready to fire the gun. Alway put the gun in safe mode when not in use. Tread every gun as if it is loaded.
- ▲Please keep away from children.
- ▲BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲Disassembly or modification of this product may result in damage to your gun, loss of warranty, and/or serious injury.
- ▲Please select a safe place to fire your gun. Always know your state and local laws concerning gun use.
- ▲Do not aim or shoot at humans, animals, buildings, or vehicles.
- ▲Please use a firearm case or bag when transporting your gun.

HOW TO INSTALL CO2 CARTRIDGE

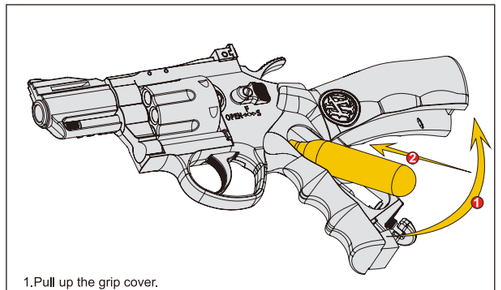


1.Pull up the grip cover.
2.load the CO2 cartridge into the grip.

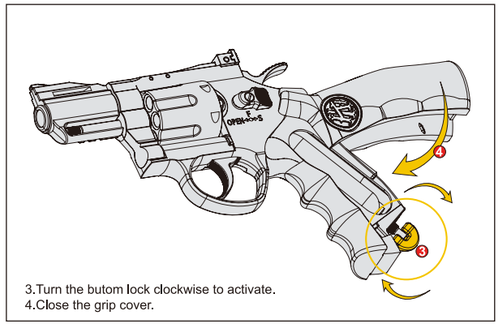


3.Turn the butom lock clockwise to activate.
4.Close the grip cover.


LOADING 6MM BB

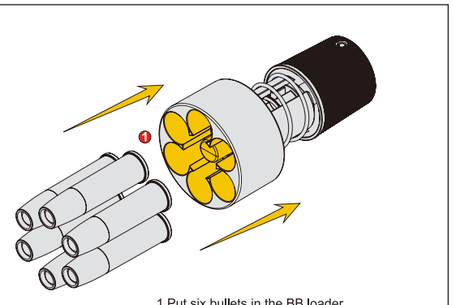

1.Put six bullets in the BB loader.

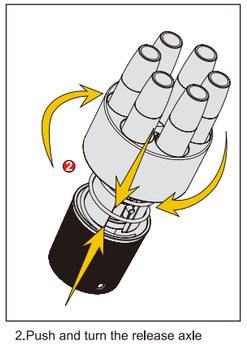

2.Push and turn the release axle clockwise to lock cartridge.

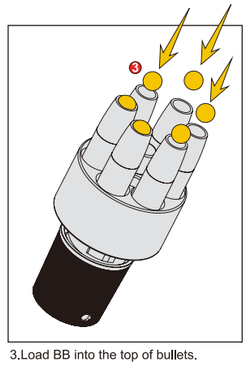


3.Load BB into the top of bullets.

LOADING 4.5MM BB & PELLET


(Steel BB & Pellet)

Load Steel BB

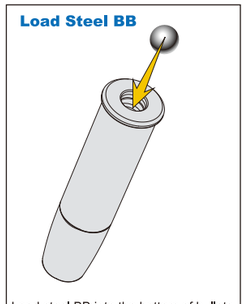


Load steel BB into the bottom of bullets.

Load Pellet
Step 1.

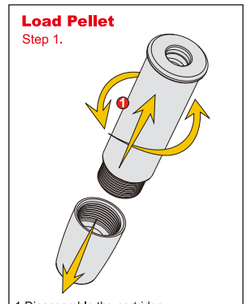


1.Disassemble the cartridge.

Load Pellet
Step 2.

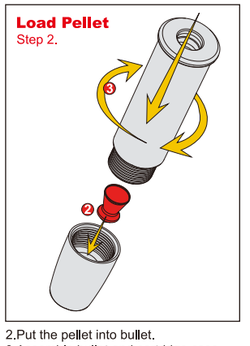


2.Put the pellet into bullet.
3.Assemble bullet and cartridge case.

Load Pellet
Step 3.

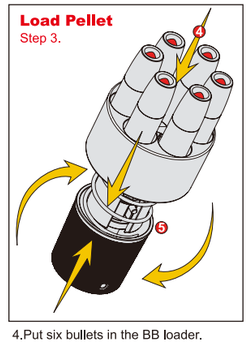


4.Put six bullets in the BB loader.
5.Turn the release axle clockwise to lock cartridge

INSERT BULLETS

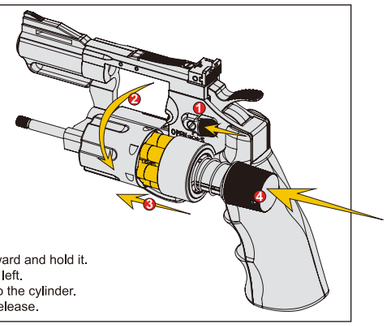


1.Push the safety forward and hold it.
2.Push cylinder to the left.
3.Insert BB bullets into the cylinder.
4.Push BB loader to release.

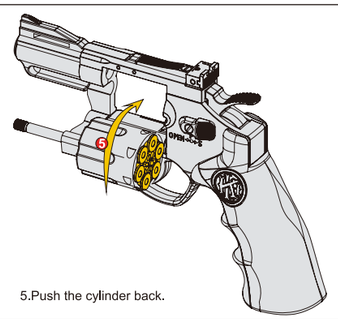

5.Push the cylinder back.

6"VER. RAIL SET INSTALLATION

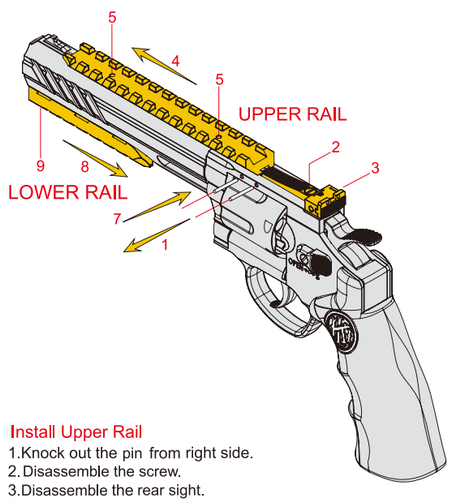


Install Upper Rail
1.Knock out the pin from right side.
2.Disassemble the screw.
3.Disassemble the rear sight.
4.Slide in upper rail from rear.
5.Lock the fixing screw.
6.Reinstall screw and rear sight.
7.Knock in the pin from left side.

Install Lower Rail
8.Slide in lower rail.
9.Lock the fixing screw.

KL-HERC 6" / 4" / 2.5" SCHEMATIC

CAL. 4.5MM (.177 in)
CAL. 6.0MM

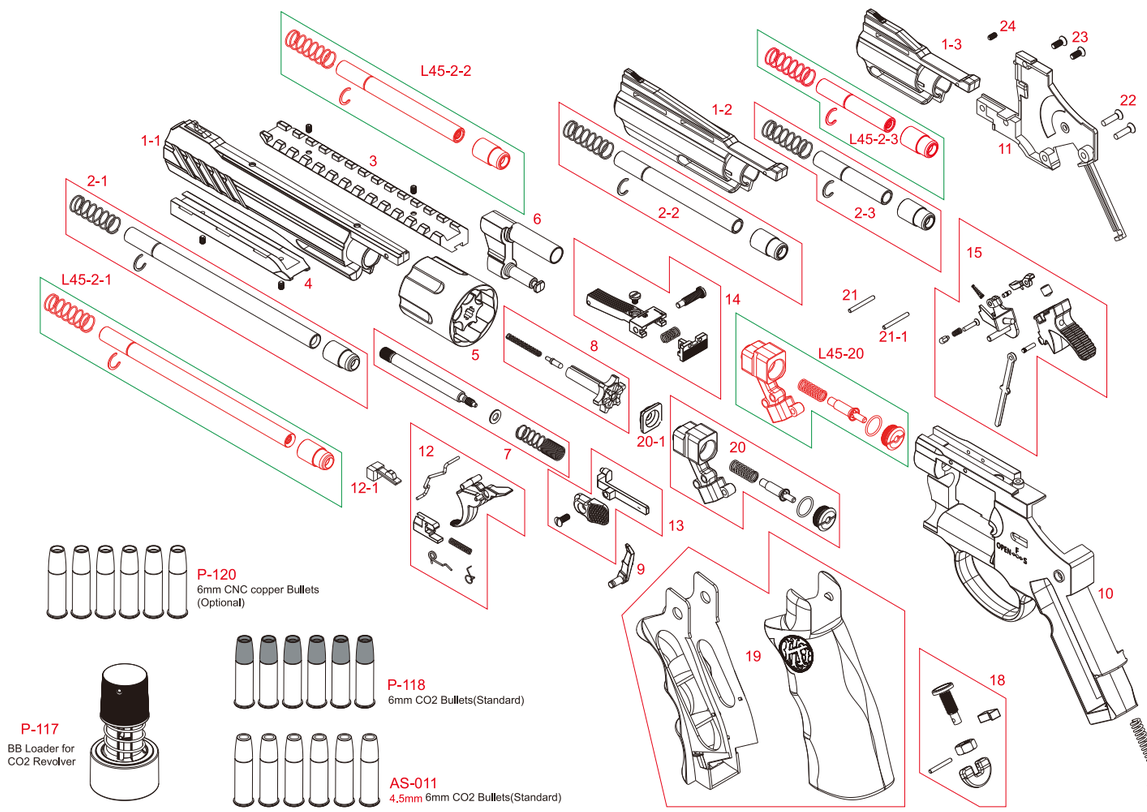

KL-1-1	OUTER BARREL (KL 6")
KL-1-2	OUTER BARREL (KL 4")
KL-1-3	OUTER BARREL (KL 2.5")
KL-2-1	INNER BARREL (KL 6")
KL-2-2	INNER BARREL (KL 4")
KL-2-3	INNER BARREL (KL 2.5")
KL-3	UPPER RAIL (KL 6" ONLY)
KL-4	LOWER RAIL (KL 6" ONLY)
KL-5	CYLINDER
KL-6	CRANE
KL-7	EXTRACTOR ROD SET
KL-8	EXTRACTOR
KL-9	HAND
KL-10	FRAME
KL-11	SIDE PLATE
KL-12	TRIGGER
KL-12-1	CYLINDER HOLDER
KL-13	CYLINDER RELEASE / SAFETY
KL-14	REAR SIGHT
KL-15	HAMMER
KL-16	HAMMER SPRING(6mm Ver.)
KL-18	PUNCTURE SCREW
KL-19	GRIP
KL-20	CO2 CHAMBER
KL-20-1	SEALING RUBBER
KL-21	PIN
KL-21-1	PIN
KL-22	SCREW X2
KL-23	SCREW X2
KL-24	SCREW X1
KLP-117	BB LOADER
KLP-118	BULLET X 6
L45-20	CO2 CHAMBER(4.5mm)
L45-2-1	INNER BARREL (6" 4.5mm Ver.)
L45-2-2	INNER BARREL (4" 4.5mm Ver.)
L45-2-3	INNER BARREL (2.5" 4.5mm Ver.)
L45-16	HAMMER SPRING (4.5mm Ver.)

www.krownland.com.tw sales@krownland.com.tw