KL HI-CAPA SERIES PISTOL USER GUIDE

4.5MM / 6MM PISTOL

DUAL POWER





KLI 6MM AIRSOFT

⚠WARNING

- ▲When using airsoft guns eye protection is required.(goggles or mask)
- ▲Never place your finger on the trigger until you are ready to fire the gun. Alway put the gun in safe mode when not in use. Tread every gun as if it is loaded.
- ▲Please keep away from children.
- ▲BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.
- ▲Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.
- ▲Do not aim or shoot at humans, animals, buildings, or vehicies.
- ▲Please use a firearm case or bag when transporting your airsoft gun.


KL HI-CAPA PARTS DESCRIPTION

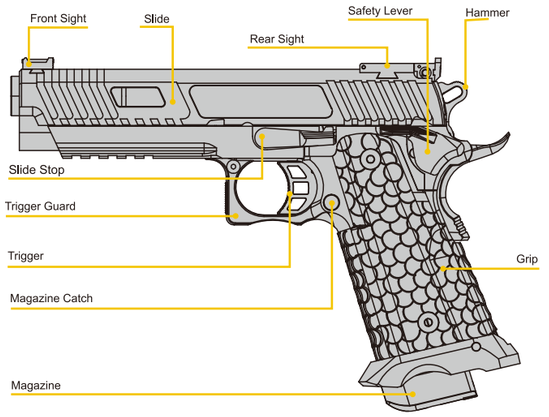

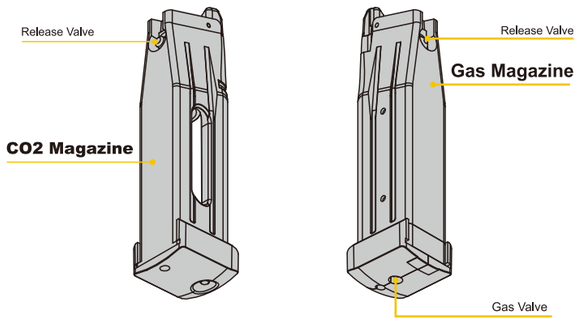


GAS INJECTION

Safety and Magazine Removeal

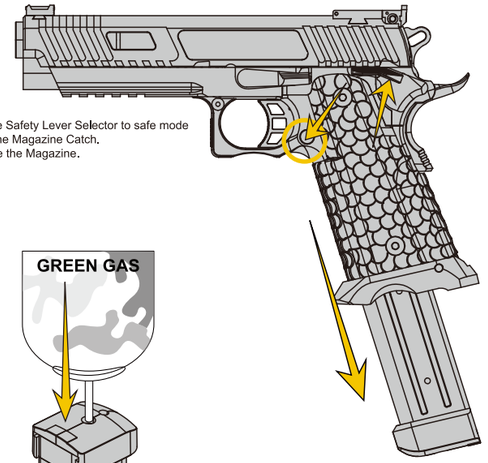


1.Turn the Safety Lever Selector to safe mode
2.Press the Magazine Catch.
3.Remove the Magazine.

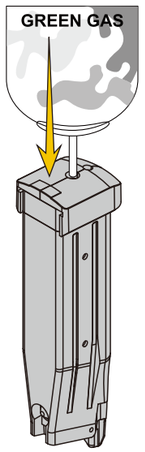


1. Turn the Magazine upside down with gas valve facing upwards.
2. Keeping the gas cylinder inverted and vertical to the Magazine,inject gas until completely filled.


INSTALL CO2 CARTRIDGE

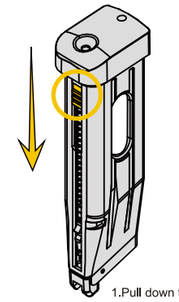


1.Pull down the magazine base catch and hold it.

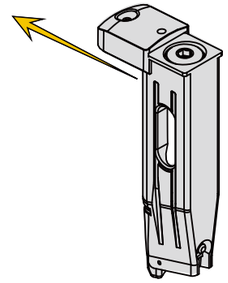

2.Remove the CO2 magazine bottom.

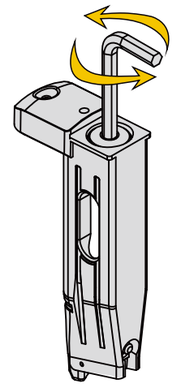

3.Release the puncture screw with a allen key.

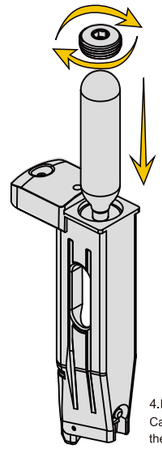


4.Loading CO2 Cartridge. Lock the puncture screw.


DISAEMBLE SLIDE



Move the Slide Stop to release mode.

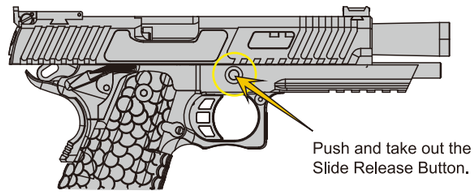

Push and take out the Slide Release Button.

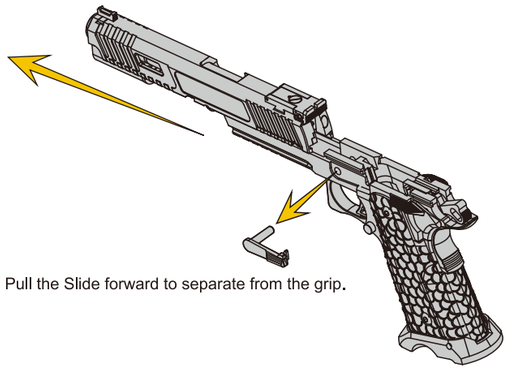

Pull the Slide forward to separate from the grip.


HOP-UP ADJUSTMENT

Wrong Hop-Up set too high
(Rotate the Hop-Up dial towards NORMAL)

Best position
Right




Wrong Hop-Up set too low
(Rotate the Hop-Up dial towards HOP)

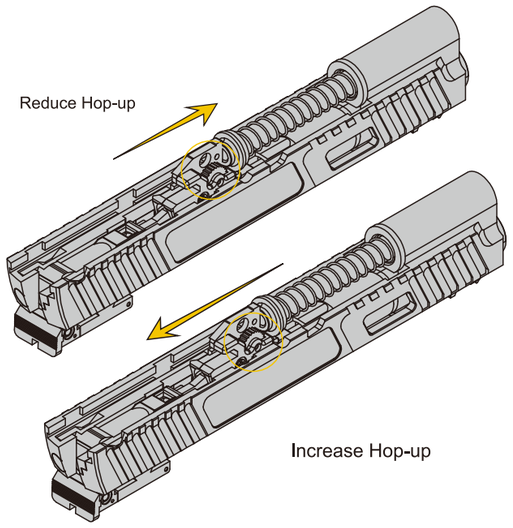

KL HI-CAPA SCHEMATIC (DUAL POWER SYSTEM)

www.krownland.com.tw
sales@krownland.com.tw

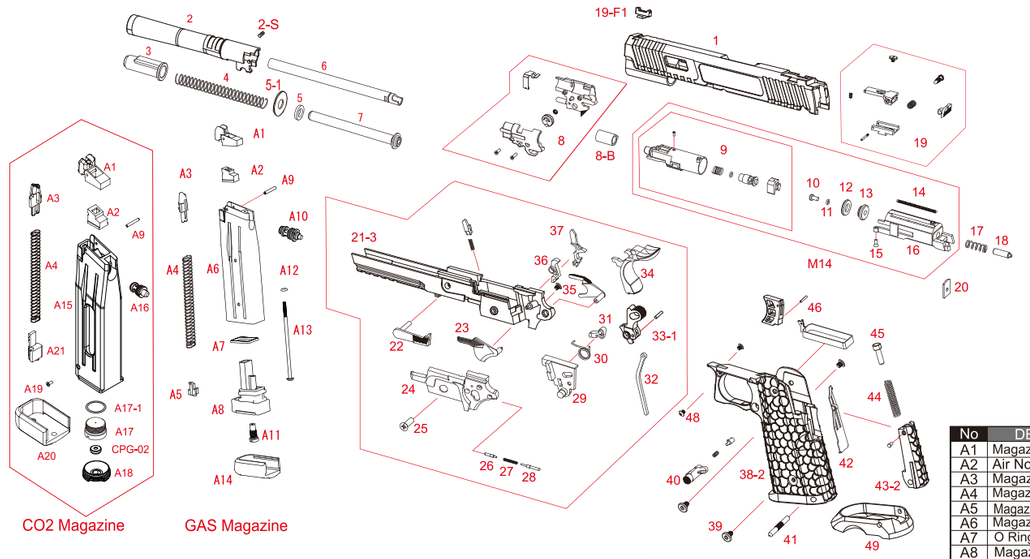

No	DESCRIPTION
1	Baba Yaga Slide
2	Baba Yaga Outer Barrel
2-S	Screw
3	Recoil Spring Plug
4	Recoil Spring(5.1 Ver.)
5	Rubber Washer
5-1	Washer
6	Inner Barrel(5.1 Ver.)
7	Recoil Spring Guide(5.1 Ver.)
8	Hop-Up Chamber
8-B	Hop Bucking
9	Air Nozzle
10	Screw
11	O Ring

No	DESCRIPTION
12	Piston
13	Piston O Ring
14	Nozzle Spring
15	Screw
16	Air Nozzle base
17	Firing pin Spring
18	Dummy Firing pin
19	Raer Sight
19-F1	Front Sight
M14	Air Nozzle Set
20	Plate
21-3	Lower Receiver (Baba Yaga ver.)
22	Slide Stop

No	DESCRIPTION
23	Safety
24	Hammer base
25	Screw
26	Pin
27	Spring
28	Pin
29	Hammer base cover
30	Sear Spring
31	Firing Pin
32	Hammer Guide
33	Hammer(5.1" Ver.)
34	Grip Safety(5.1" Ver.)
35	Screw

No	DESCRIPTION
36	Shear Spring
37	Shear
38-2	Baba Yaga Grip
39	Screw
40	Magazine Catch
41	Main Spring Housing Pin
42	Sear Spring
43-2	Baba Yaga Main Spring Housing
44	Main Spring
45	Main Spring Screw
46	Trigger
48	Screw
49	Magwell

No	DESCRIPTION
A1	Magazine Lip
A2	Air Nozzle Rubber
A3	Magazine Bar
A4	Magazine Spring
A5	Magazine Base Stopper
A6	Magazine Frame
A7	O Ring
A8	Magazine Base
A9	Pin
A10	Valve
A11	Gas Valve
A12	O Ring
A13	Screw
A14	Magazine Bottom
A15	CO2 Magazine Frame
A16	CO2 Magazine Valve
A17	CO2 Cartidge Stab
A18	CO2 Cartidge Base Cover
A19	Screw
A20	CO2 Magazine Bottom
A21	Magazine Base Catch
CPG-02	Gas Seal

KL HI-CAPA SERIES PISTOL USER GUIDE

4.5mm STEEL BBs / (0.177")


CO2 BLOWBACK




KROWN LAND INTERNATIONAL CO., LTD.

www.krownland.com.tw sales@krownland.com.tw

KL HI-CAPA PARTS DESCRIPTION

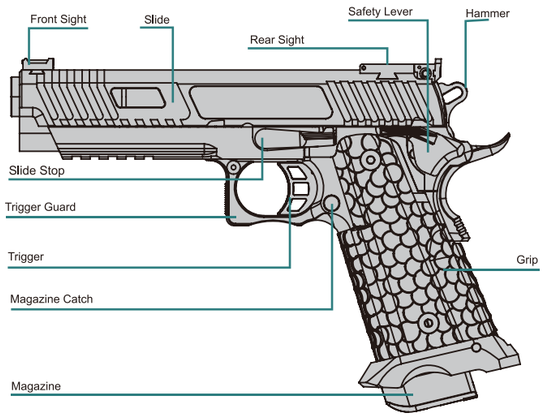

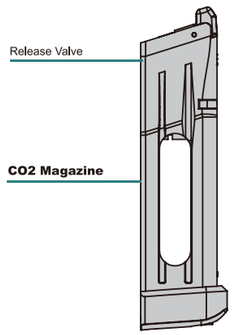

SAFETY AND MAGAZINE REMOVEAL




1.Turn the Safety Lever Selector to safe mode
2.Press the Magazine Catch.
3.Remove the Magazine.


⚠WARNING

- ▲When using airsoft guns eye protection is required.(goggles or mask)
- ▲Never place your finger on the trigger until you are ready to fire the gun. Alway put the gun in safe mode when not in use. Tread every gun as if it is loaded.
- ▲Please keep away from children.
- ▲BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.
- ▲Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.
- ▲Do not aim or shoot at humans, animals, buildings, or vehicies.
- ▲Please use a firearm case or bag when transporting your airsoft / airgun.


INSTALL CO2 CARTRIDGE

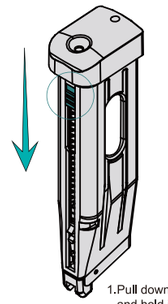


1.Pull down the magazine base catch and hold it.

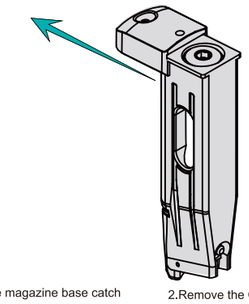

2.Remove the CO2 magazine Bottom.

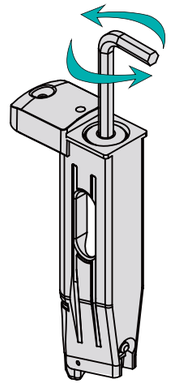


3.Release the puncture screw with a allen key.

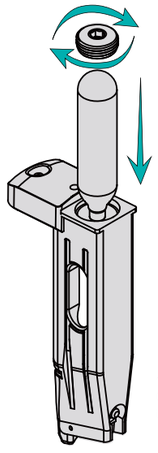

4.Loading CO2 Cartridge. Lock the puncture screw.

LOADING BB BULLETS

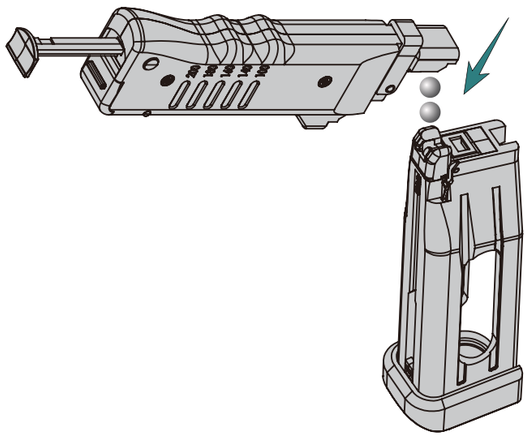


Load the BBs by hand or BB Loader.


DISAEMBLE SLIDE



Move the Slide Stop to release mode.

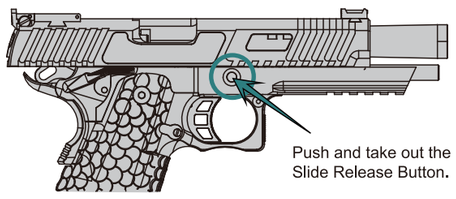


Push and take out the Slide Release Button.

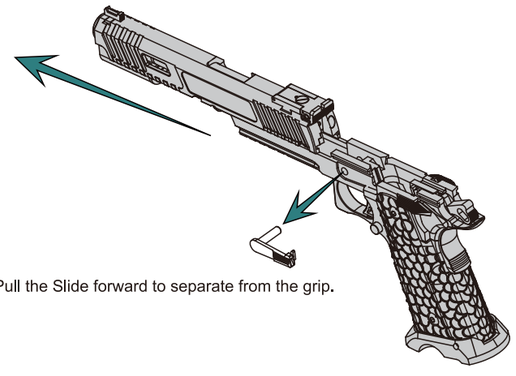

Pull the Slide forward to separate from the grip.

KL HI-CAPA 4.5mm SCHEMATIC

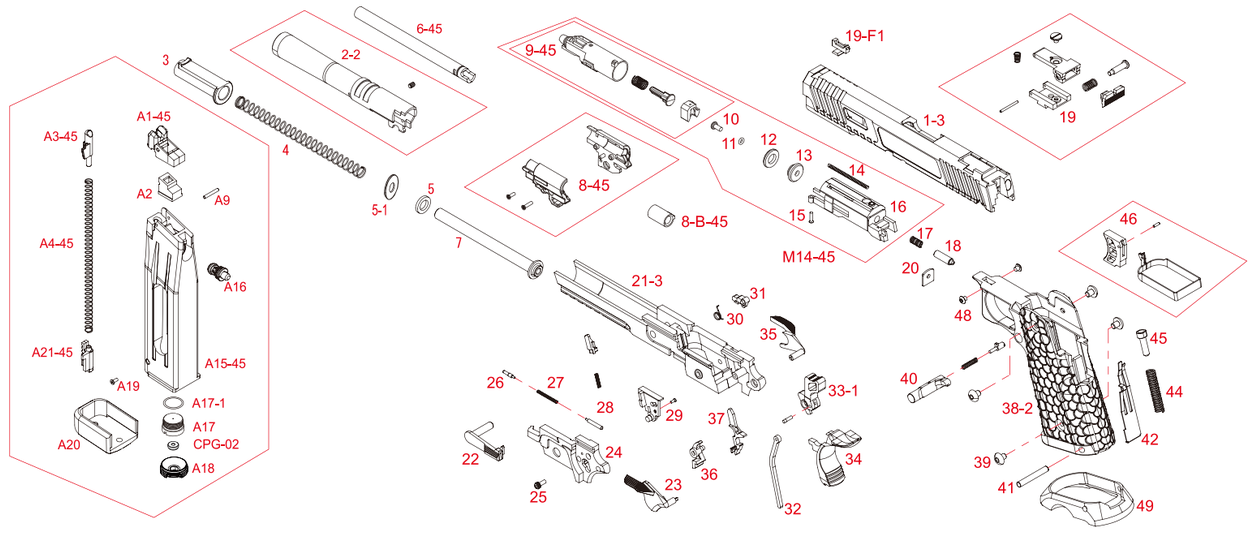

No	DESCRIPTION
A1-45	Magazine Lip
A2	Air Nozzle Rubber
A3-45	Magazine Bar
A4-45	Magazine Spring
A9	Pin
A15-45	CO2 Magazine Frame
A16	CO2 Magazine Valve
A17	CO2 Cartidge Stab
A17-1	O Ring
A18	CO2 Cartidge Base Cover
A19	Screw
A20	CO2 Magazine Bottom
A21-45	Magazine Base Catch
CPG-02	Gas Seal
M14-45	Air Nozzle Set

No	DESCRIPTION
1-3	Baba Yaga Slide
2-2	Baba Yaga Outer Barrel
3	Recoil Spring Plug
4	Recoil Spring(5.1 Ver.)
5	Rubber Washer
5-1	Washer
6-45	Inner Barrel(5.1 Ver.)
7	Recoil Spring Guide(5.1 Ver.)
8-45	Hop-Up Chamber
8-B-45	Hop Bucking
9-45	Air Nozzle
10	Screw
11	O Ring
12	Piston
13	Piston O Ring

No	DESCRIPTION
14	Nozzle Spring
15	Screw
16	Air Nozzle base
17	Firing pin Spring
18	Dummy Firing pin
19	Raer Sight
19-F1	Front Sight
20	Plate
21-3	Lower Receiver (Baba Yaga ver.)
22	Slide Stop
23	Safety
24	Hammer base
25	Screw
26	Pin
27	Spring

No	DESCRIPTION
28	Pin
29	Hammer base cover
30	Sear Spring
31	Impact Pin
32	Hammer Guide
33-1	Hammer(4.3° Ver.)
34	Grip Safety(5.1° Ver.)
35	Screw
36	Sear Spring
37	Shear
38-2	Baba Yaga Grip
39	Screw
40	Magazine Catch
41	Main Spring Housing Pin
42	Sear Spring

No	DESCRIPTION
43	Main Spring Housing(5.1 Ver.)
44	Main Spring
45	Main Spring Screw
46	Trigger
47	Flash Hider
48	Screw

facebook KLI Airsoft & Airgun | KLI-AIRSOFT YouTube Broadcast Yourself™ | kli.airsoft | MADE IN TAIWAN