

KLSP SERIES PISTOL USER GUIDE


6MM (CO2 / GAS) DUAL POWER

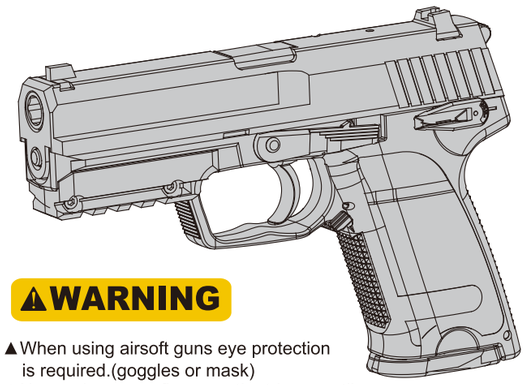


⚠WARNING


- ▲When using airsoft guns eye protection is required.(goggles or mask)
- ▲Never place your finger on the trigger until you are ready to fire the gun. Alway put the gun in safe mode when not in use. Tread every gun as if it is loaded.
- ▲Please keep away from children.
- ▲BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.
- ▲Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.
- ▲Do not aim or shoot at humans, animals, buildings, or vehicies.
- ▲Please use a firearm case or bag when transporting your airsoft gun.

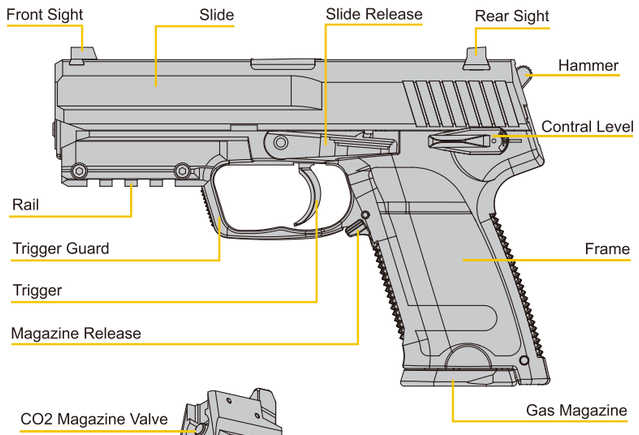


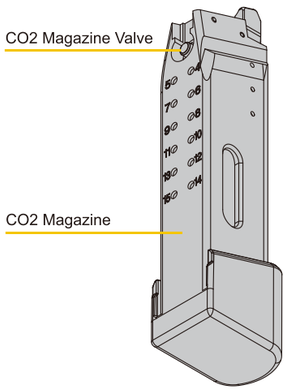

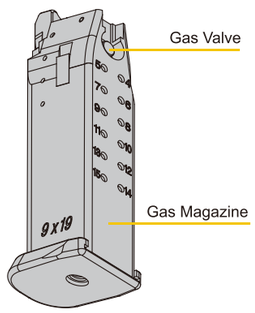


GAS INJECTION

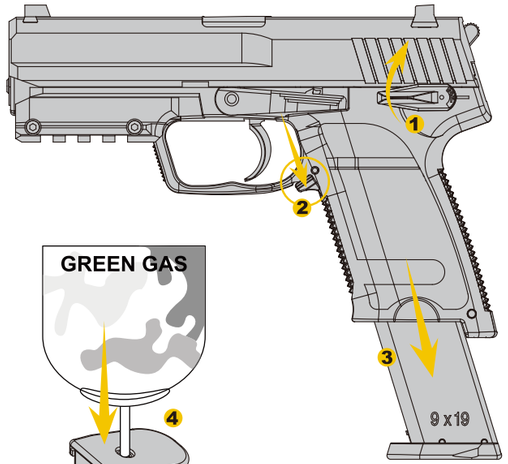

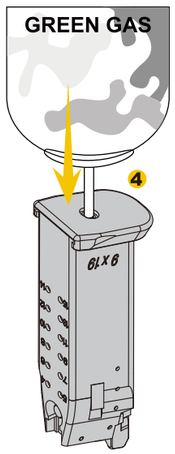


1.Turn the Contral Level to safe mode.
2.Push down the Magazine Release.
3.Remove the Magazine.
4.Turn the Magazine upside down with gas refill inlet facing upwards. Keeping the gas cylinder inverted and vertical to the Magazine, Inject gas until completely filled.


INSTALL CO2 CARTRIDGE

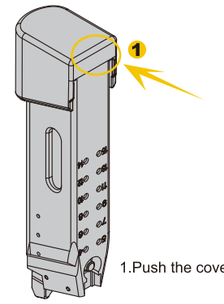


1.Push the cover out.

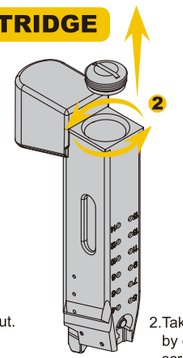

2.Take out the cap by coin or flat head screw driver.

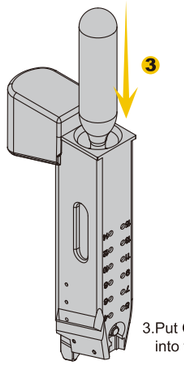

3.Put CO2 Cartridge into the Magazine.

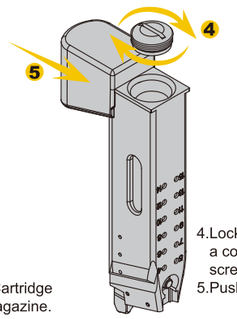

4.Lock the screw by a coin or flat head screw driver.
5.Push the cover back.


HOP-UP ADJUSTMENT

Wrong Hop-Up set too high
(Rotate the Hop-Up dial towards NORMAL)


Best position
Right

Wrong Hop-Up set too low
(Rotate the Hop-Up dial towards HOP)



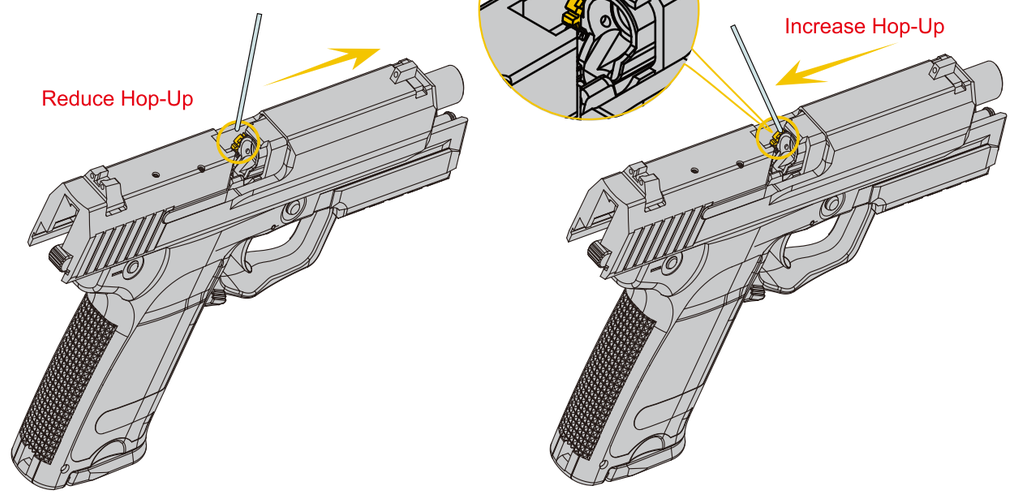

KLSP SCHEMATIC (DUAL POWER SYSTEM)

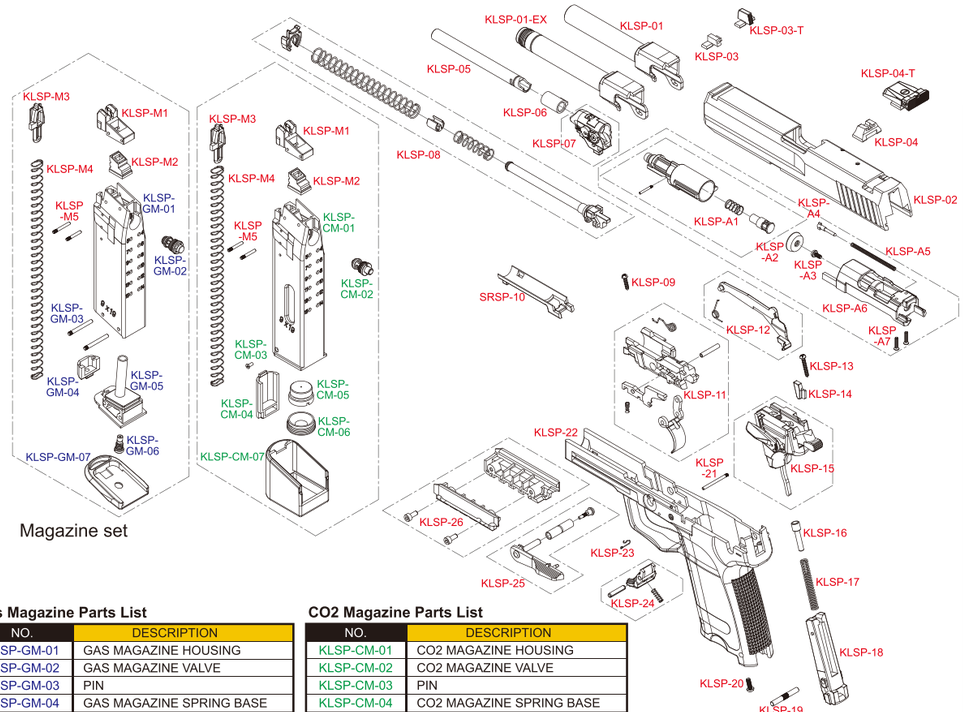

Gas Magazine Parts List

NO.	DESCRIPTION
KLSP-GM-01	GAS MAGAZINE HOUSING
KLSP-GM-02	GAS MAGAZINE VALVE
KLSP-GM-03	PIN
KLSP-GM-04	GAS MAGAZINE SPRING BASE
KLSP-GM-05	GAS MAGAZINE BASE
KLSP-GM-06	GAS VALVE
KLSP-GM-07	GAS MAGAZINE BOTTOM PLATE

CO2 Magazine Parts List

NO.	DESCRIPTION
KLSP-CM-01	CO2 MAGAZINE HOUSING
KLSP-CM-02	CO2 MAGAZINE VALVE
KLSP-CM-03	PIN
KLSP-CM-04	CO2 MAGAZINE SPRING BASE
KLSP-CM-05	CO2 PUNCTURE
KLSP-CM-06	CO2 PUNCTURE COVER
KLSP-CM-07	CO2 MAGAZINE BOTTOM COVER

Parts List

NO.	DESCRIPTION
KLSP-01	BARREL
KLSP-01-EX	EXTENDED BARREL
KLSP-02	SLIDE
KLSP-03	FRONT SIGHT
KLSP-03-T	FRONT SIGHT(TAC)
KLSP-04	REAR SIGHT
KLSP-04-T	REAR SIGHT(TAC)
KLSP-05	INNER BARREL
KLSP-06	HOP UP BUCKING
KLSP-07	HOP UP BASE
KLSP-08	RECOIL SPRING ASSEMBLY
KLSP-09	SCREW
KLSP-10	PLATE
KLSP-11	TRIGGER ASSEMBLY
KLSP-12	TRIGGER LEVER
KLSP-13	SCREW
KLSP-14	LOCKING UNIT
KLSP-15	HAMMER / SAFTY ASSEMBLY
KLSP-16	HAMMER SPRING GUIDE
KLSP-17	HAMMER SPRING
KLSP-18	HAMMER SPRING SLEEVE
KLSP-19	PIN
KLSP-20	SCREW
KLSP-21	PIN
KLSP-22	FRAME
KLSP-23	SPRING
KLSP-24	MAGAZINE CATCH
KLSP-25	SLIDE RELEASE
KLSP-26	RAIL ASSEMBLY
KLSP-A1	AIR NOZZLE
KLSP-A2	PISTON RING
KLSP-A3	SCREW
KLSP-A4	SPRING GUIDE
KLSP-A5	SPRING
KLSP-A6	AIR NOZZLE BASE
KLSP-A7	SCREW
KLSP-M1	MAGAZINE LIP
KLSP-M2	AIR NOZZLE RUBBER
KLSP-M3	MAGAZINE BAR
KLSP-M4	SPRING
KLSP-M5	PIN